# **TermulatorX**

TermulatorX is a Macintosh application that lets you access Synclavier Digital's Real-Time Program (RTP).

## Selecting a Serial Port

TermulatorX uses an RS-232 serial port to communicate with a Synclavier® Digital Audio System. Most modern Macintosh computers do not have built-in RS-232 serial ports, however several third-party vendors provide add-on hardware the is both inexpensive and effective. The USB Serial Ports provided by Keyspan (<a href="http://www.keyspan.com">http://www.keyspan.com</a>) are perhaps the most commonly used USB Serial Ports. Their USA-28X Twin Serial Adapter has been tested and found to work well with TermulatorX. Any Macintosh RS-232 serial port hardware that uses the POSIX software standard should be compatible with TermulatorX.

When you use TermulatorX for the first time you will see all available serial ports listed under the **TERMINAL** menu. Simply choosing the correct serial port and setting the BAUD rate is all the setup that is required.

### **Accessing the RTP**

TermulatorX is a Macintosh application that serves as a terminal emulation program. It communicates with Synclavier Digital hardware over an RS-232 cable, and provides a way for users to communicate with the RTP displays from the Macintosh.

When using TermulatorX, it is helpful to understand the program from two perspectives—

- It is a Macintosh application. TermulatorX is launched from the Finder and consumes Macintosh RAM when it is running. It has a menu bar where you can select display options such as how large the window should be on your screen.
- It is a window into the RTP displays. Once you click in the TermulatorX window, you are working in the RTP. The RTP displays will not necessarily behave as conventional Macintosh windows. The trackball will not always work as you would expect it to on a Macintosh. Standard commands such as S will *not* save your current sound file, timbre or sequence.

#### **TermulatorX Menus**

The TermulatorX menus appear in the menu bar when TermulatorX is the current application.

### **FILE MENU**

COMMAND KEY FUNCTION

Close VK Window -W Closes the VK Panel display window.

Page Setup... Set up the page size, orientation and other options for

printing.

Print - P Allows you to print the current display from the

Macintosh. The printout is scaled to print to the

margins of the chosen paper size.

Start Journaling Allows capturing the output from the Synclavier® to a

Macintosh Text File

Capture Printer Output Not available with TermulatorX. With SynclavierX

allows the capturing of laser printer output to a Macintosh text file which can then be sent to a post-

script printer.

Quit -Q Quits the TermulatorX program and returns you to the

Finder.

#### **EDIT MENU**

**COMMAND KEY FUNCTION** Z Undo not available Cut Χ not available Copy -C Copies text from the current display to the Macintosh Clipboard. Graphics are not copied. Paste V Pastes the contents of the Macintosh Clipboard into most Macintosh applications. Clear not available

#### WINDOW MENU

COMMAND KEY FUNCTION

EditView Starts the EditView application.

MIDInet Starts the MIDInet application.

Autoconform Start the Autoconform application.

TransferMation Starts the TransferMation application.

Leave Window In Prevents clicking in a window from bringing that

Background window to the foreground.

Arrange VK Panel... A Allows you to rearrange the VK Panel sections and store

preset arrangements.

Panel Presets		Recalls VK Panel arrangements which have been set up
Preset 1	1	and stored using the Arrange VK Panel command.
Preset 2	2	
Preset 3	3	
Preset 4	4	
Preset 5	5	
Preset 6	6	
Colors		Choose colors for certain VK Panel display items.
Show VK Panel	D	Toggles between the current RTP display and the VK Panel display.
Show/Hide Terminal Window	D	Allows showing or hiding the terminal window

# **DISPLAY MENU**

COMMAND	KEY	FUNCTION
Half Size	Н	Displays small TermulatorX window.
Mid Size	M	Displays medium TermulatorX window.
Full Size	F	Displays large TermulatorX window.
Extended		Currently implemented only in Music Printing F.5. Allows editing of graphics larger than the screen.
Show (Hide) Title & Scroll bars	L	Adds (or deletes) scroll bars at the bottom and right.
White on Black (Black on White)		Exchanges background and foreground colors.
Align Window to Screen	R	Aligns the window to the top left of the screen.

# **TERMINAL MENU**

COMMAND	KEY	FUNCTION
PF1	F1	Moves from the RTP to the Reverse Compiler.
PF2	F2	Moves from the Music Printing module to the RTP.
PF3	F3	Moves from the RTP to the Music Printing module.
PF4	F4	Moves from the RTP to the Signal File Manager.
Pause (Resume)		Stops/resumes drawing or scrolling on screen.
Break		Moves to the Monitor module. The current RTP screen is replaced with a Ready> prompt.
Reset		Returns to either the Main or Welcome menu.

Real-Time Program

9600, 19200 or 38400 Shows the current baud rate. It should correspond to

Baud the baud rate of your Synclavier

Clear Holds T Clears held buttons anywhere on the VK Panel.

Update Panels U Updates all panels to display current information.

Search For Ports Refreshes the list of USB serial ports that are available

**HELP MENU** 

COMMAND KEY FUNCTION

Help... Displays some key commands and instructions for

starting the Synclavier or DTD system.

Quick Reference not available